
1W-TH-IB2 on-wall temperature + humidity sensor

A compact on-wall sensor for the 1-Wire bus, designed to measure temperature and relative air humidity in building interiors.



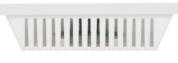

Basic parameters

| Sensor type | DS2438 |
|---|--|
| Temperature measurement range | -40 °C/+85 °C with +-2 °C tolerance |
| Relative air humidity measurement range | 11 % RH / 89 % RH (+-3 % RH tolerance) |
| Connection | 1-Wire (screw terminal) |
| Protection | IP30 |
| Plastic box material | ABS plastic |
| Installation | Installation box (KU 68) |
| Dimensions | 100 × 100 × 25 mm |
| Power supply | 5 V (on connector along with 1-Wire) |
| Max. current draw | 2 mA |

Installation guide

- 1. Remove the plastic box cover held in place by four small plastic holders visible from the below.
- 2. Connect all conductors to the sensor's screw terminal according to the descriptions:
 - a. ← 1W: 1-Wire bus input
 - b. \rightarrow 1W: 1-Wire bus output
 - c. +5V: direct voltage positive pole*
 - d. GND: direct voltage negative pole*
- 3. Thread the wires out of the box through the circular opening in the backplate.
- 4. Remove the protective sticker covering the humidity sensor (see the picture)
- 5. Re-assemble the sensor.

* On all Unipi controllers the corresponding voltage is available on a single connector along with 1-Wire data conductor.





Jarní 44g, 614 00 Brno
Czech Republic



Software

The sensor is fully compatible both with the <u>Mervis</u>, the officially supported SW platform for Unipi products, and the <u>EVOK</u>, an open-source application programming interface (API)

Mervis

For reading data from the sensor the Mervis IDE development environment contains *UNIPI_1W_TH* function block available in the Lib.Unipi library.

| | | 0000 min | na - | riogram | |
|-------------|-----------------|----------|-----------|---------|---|
| Add Box | | | | | × |
| Name: 1w | | | | | |
| Name | Namespace | Version | Module | Status | |
| UNICA_U1WT | lib.Unipi.Unica | v1_0 | Lib.UniPi | | |
| UNIPI_1W_TH | lib.Unipi | v1_0 | Lib.UniPi | | |
| | | | | | |
| | | | | | |

evok

The sensor is detected automatically and be used right away. Measured values are accessible on an address of the particular sensor also serving as a device identification. You can find the address on a sticker provided with the product.

A request example: 192.168.221.78:8080/json/1wdevice/XYZ (XYZ = sensor address)

Useful info

- Unipi Knowledge Base
- <u>Unipi e-shop</u>
- Unipi product catalogue
- <u>Unipi homepage</u>



